

HOW TO ACCESS PUMP ON RIVERBED TABLE

STEP 1: Remove the 2 HEX bolts holding the back legs onto the table. (repeat on both back legs)




STEP 2: Remove the pump lever but taking out the little screws – can be a bit fiddly. :)



STEP 3: Remove the 3 wood screws at the bottom of rear plate.

This will allow the legs and pump housing to come off so you can access the pump.

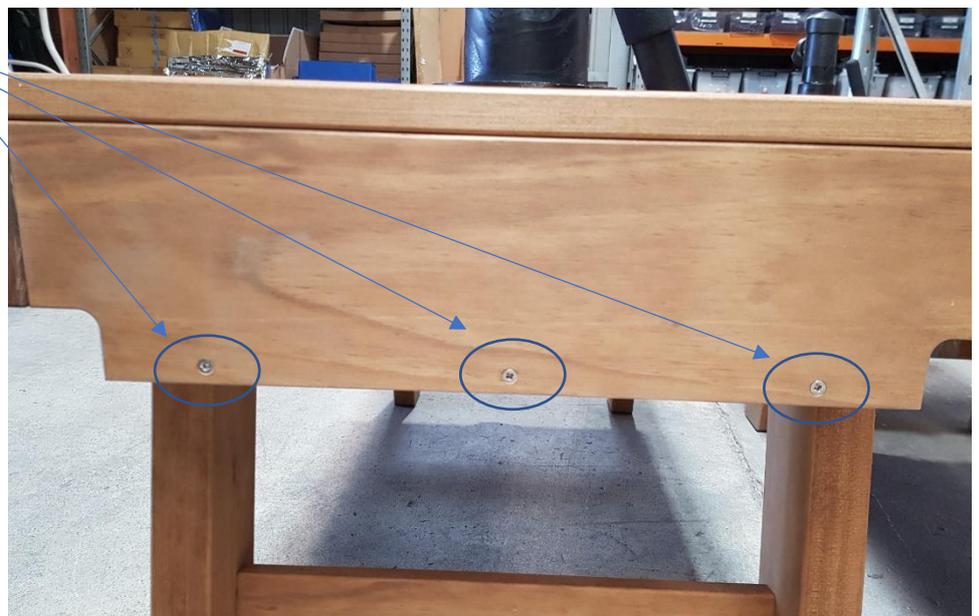

STEP 4: Now you have the pump housing and leg set removed, it will allow you to access the screws holding the flange onto the pump



STEP 5: Remove all screws as shown.



STEP 6: Remove the flange housing from the pump.



STEP 5: Remove the centre screw holding the flange on.

Replace flange and put back together ensuring all screws are tight

